support@wvodesigns.com



Items Needed:

- (1) On/Off/On DPDT (Double Pole Double Throw) Switch with quick connect terminals (McMaster Carr Part # 7343K791 w/ quick disconnect terminals)
- (6) 14-16 Gauge Quick Disconnect Female Spade Connector, Insulated
- ½" Metal Drill Bit

Wire Strippers/Crimpers

Needle Nose Pliers


Silicone Sealant

- (2) Wire Nuts
- (4) Short pieces of 14 gauge wire

Note: If you don't feel comfortable wiring, consult an electrician

Switching the #8 and #5 wires will reverse the rotation of the motor.

This will be done by adding an extra switch.

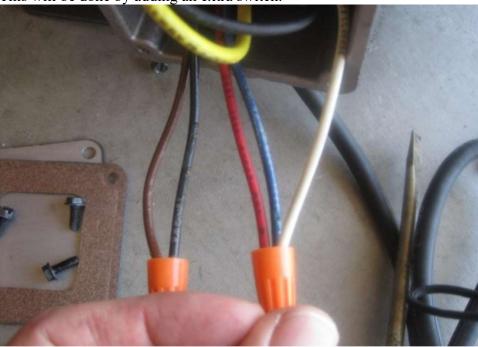

Step 1:

Remove the existing switch (be sure to mark on the actual switch which way is on and off as the plate will be removed as part of this process)


Drill 2 new ½" holes on either side of the existing hole. Make sure to measure in from the sides enough to leave just enough room for the switches.



Step 2:

Add 2 leads to the #8 wire and another 2 leads to the #5 wire. Connect using wire nuts. Add quick connect female spade connectors to all of the wire bundles Wire the switch new switch as shown below.

BALDOR • RELIANCE Product Information Packet: 34M185Y166G1 - .75HP,1725RPM,1PH,60HZ,D71CZ,3428LC,TEFC

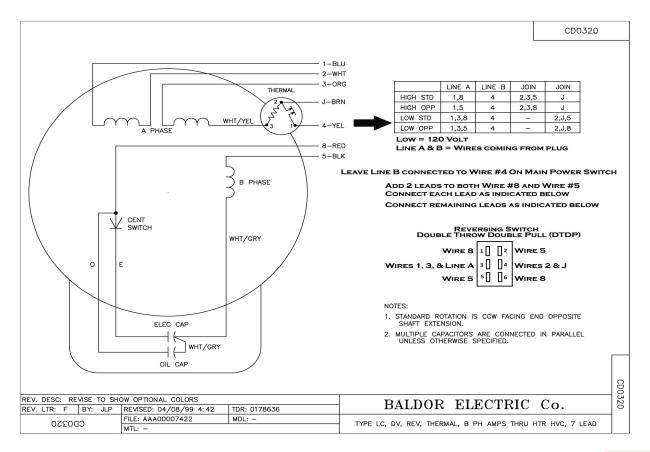

Page 6 of 6



Then connect the wires to the switch



Step 3

Next, connect power to the pump and test the switches to ensure it's wired correctly To switch directions you MUST turn the power switch off first.

Switching with power on may damage the motor

Next place the switches back into the housing, being careful not to knock any of them loose

TO POT 1,8 4 J,8

STO ROT. IS CCW FACING END OPPOSITE SHAFT EXTENSION

LINE A LINE D TOGETHER

OPP. ROT. 1,5 4 J,8

LC0002

Add silicone sealer around the unused switch hole to seal everything back up.

Step 4

Add the power switch plate, attach the switch nuts. Be sure to get the plate on in the right direction. Carefully place all of the wires back into the wiring housing being careful not to knock any loose. Everything will fit, just go slowly. Then attach the housing cap.



Step 5 Here's how it will look once complete:



NOTE:

DO NOT reverse the pump direction while the power switch is on. Doing so may damage the pump motor.

Test the switches out to make sure everything works. Enjoy your new reversible pump!