


Go/No Go Test Kit Instructions

- 1) Add 1 mL of oil to test kit vial with syringe
- 2) Shut lid and shake for 10 seconds
- 3) Examine color of liquid in vial

If it stays pin, your FFA% (Free Fatty Acid percentage) is at or under the kit limit
If it turns any other color, your FFA% exceeds the test limit

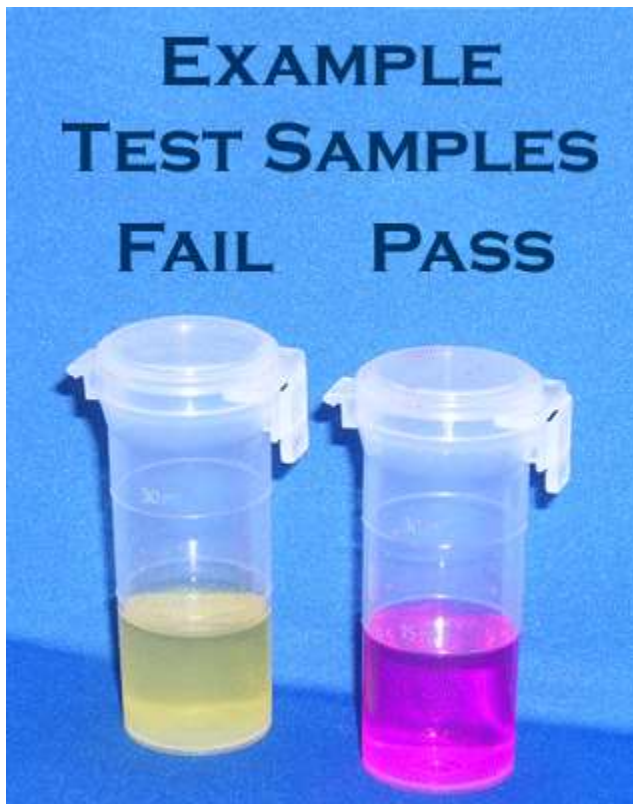

Reorder kits at Utah Biodiesel Supply

On the web at: www.utahbio.com

By phone 801-820-5753

By email info@utahbio.com